

The following tools will be needed.




1. Using your tape measure, make a mark 18" down from the top of the panel. Repeat for the other side



2. Place 1 bracket with the rear edge touching the cloth on the rear of the panel. Align the top of the bracket (wide slot faces the bottom of the bracket).



3. Attach the panel using the 2 supplied screws. Repeat for other bracket.

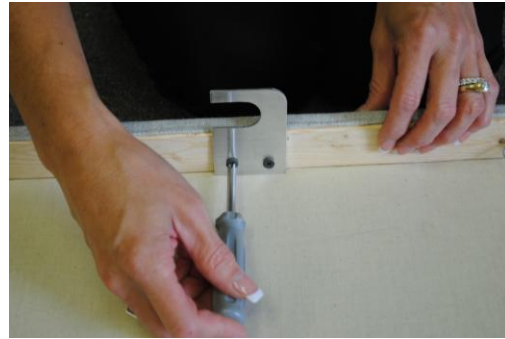

4. Set your boom stand so that the boom is horizontal.



5. Hang the panel over the boom.

